



## LIFESTYLE ADENA FIRE PIT


### INSTRUCTION MANUAL LFS707




#### WARNING: FOR OUTDOOR USE ONLY

Retain these instructions for future reference.

Before using this product, make sure you have read, understand and are following all information provided in the following important instructions. Failure to follow can cause death, serious injury or property damage. Improper installation, adjustment, alteration or maintenance can cause injury or property damage.

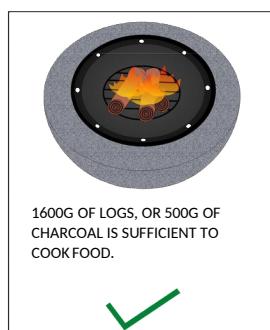


1600G OF LOGS, OR 500G OF CHARCOAL IS SUFFICIENT TO COOK FOOD.

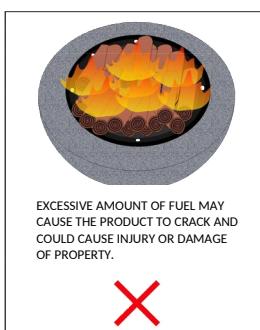

EXCESSIVE AMOUNT OF FUEL MAY CAUSE THE PRODUCT TO CRACK AND COULD CAUSE INJURY OR DAMAGE OF PROPERTY.



PLEASE DO NOT BURN FUEL DIRECTLY ON MGO.

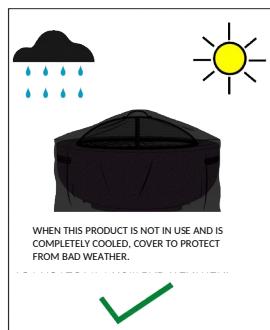

WHEN THIS PRODUCT IS NOT IN USE AND IS COMPLETELY COOLED, COVER TO PROTECT FROM BAD WEATHER.



PLEASE COVER PRODUCT TO EXTEND PRODUCT LIFE.

## Important safeguards

1. This product is for outdoor use only and shall not be used in a building, garage or any other enclosed area.
1. Toxic carbon monoxide fumes can accumulate and cause asphyxiation.
2. This product is not for commercial use.
3. This product should only be used by adults and all children and pets should be kept at a safe distance.
4. Do not use petrol, white spirit, lighter fluid, alcohol or other similar chemicals to light a fire as a rapid increase in temperature could damage this product. This product is only suitable for use with charcoal, untreated wood or dry logs. Do not use coal.
5. Do not use this product until it is completely assembled and all parts are securely fastened and tightened. 6. Do not use the product on decking or any other flammable surfaces such as dry grass, wood chips, leaves.
6. Always empty this product after use. Do not remove ashes or charcoal until they are completely and fully extinguished.
7. Do not touch this product until it is completely cooled unless you are wearing heat resistant gloves as it is hot when in use.
8. Do not handle or move this product when in use as it is hot.
9. Do not attempt to store this product until all ashes and charcoals are completely extinguished.
10. Always use a safety tool and heat resistant gloves when adding or moving fuel.
11. The holes in the MGO body are used to let the air in and heat out. DO NOT OBSTRUCT THESE HOLES WHEN IN USE.
12. Always use a safety tool and heat resistant gloves to move the grill and mesh cover during use because this product will become very hot.
13. Do not leave a burning fire unattended.
14. Fire hazard-Hot embers may emit while in use.
15. Do not overload this product with fuel. Do not add additional fuel until the fire burns down. If an portion of the fire bowl is growing red, it is overloaded.
16. Do not overload this product with fuel. Two small logs, 1600g, is sufficient. Do not add additional fuel until the fire burns down.
17. Do not burn fuel directly on the fire bowl base. Do burn on the log grate.
18. Do keep the fuel away from the wall of the fire bowl as the high temperature may damage it.
19. Avoid breathing smoke from the fire and avoid getting it into your eyes.
20. Always thoroughly inspect this product before use.
21. A slight discolouration of finish may occur after use.

## Care and use

### SAFETY INFORMATION

**WARNING! This fire pit will become very hot, do not move it during operation.**

**Do not use indoors!**

**WARNING! Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3!**

**WARNING! Keep children and pets away.**

**Do not use the fire pit in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality.**

## **Lighting**

- 1, Ensure this product is positioned on a permanent flat, level, heat resistant, non-flammable surface away from flammable items.
- 3, Place paper or dry kindling on the log grate in the centre of the fire bowl bottom.
- 4, Place fuel on the paper or dry kindling
- 5, Light the paper or dry kindling to start a fire.

## **Tending the fire**

- 1, Add fuel to this product to increase the heat slowly when embers glow. Do not overload with fuel, only two or three small logs is sufficient.
- 2, When shifting logs, use a safety tool to allow for additional airflow.

## **Extinguishing**

To extinguish this product, stop adding fuel and allow fire to die or douse with sand. Do not use water as this may damage this product.

## **Care and inspecting**

- 1, This product should be inspected on a regular base to ensure product safety and longer product life.
- 2, This product should be cleaned after use to ensure longer product life. Do not use oven cleaner or abrasive cleaner as they will damage this product.
- 3, When not in use, cover this product once completely cooled with a cover to help protect it from bad weather.
- 4, Store this product in a dry location to maximise product life.
- 5, The surface of this product will age, discolor and develop surface rust as soon as it is placed outside and after use. This is to be expected, but it does not affect use and is not a product fault. Please see below instructions on how to refresh the paint finish.

Remove loose paint and rust from the metal with a wire brush when needed and re-paint using a high temperature paint, resistant to at least 600°C. To help reduce surface rust, rub this product with an oily rag after each use.

The MGO body has been pre-treated with sealant but regular retreating throughout the season is recommended to extend the life and to protect the product from weathering.

## **USE AS A BBQ**

Before cooking ensure the cooking grill and tools are clean and free of old food residues.

Add about 0.5kg of charcoal on the log grate and light according to the above instructions

Place the grill into the fire bowl ensuring it is stable.

This barbecue shall be heated up and the fuel kept hot for at least 30 minutes prior to the first cooking.


Do not cook before the fuel has a coating of ash.

Ensure all food is cooked thoroughly before eating.


After cooking do not remove the grill until it has completely cooled.

After cooking always clean the grill and the too

## PART LIST

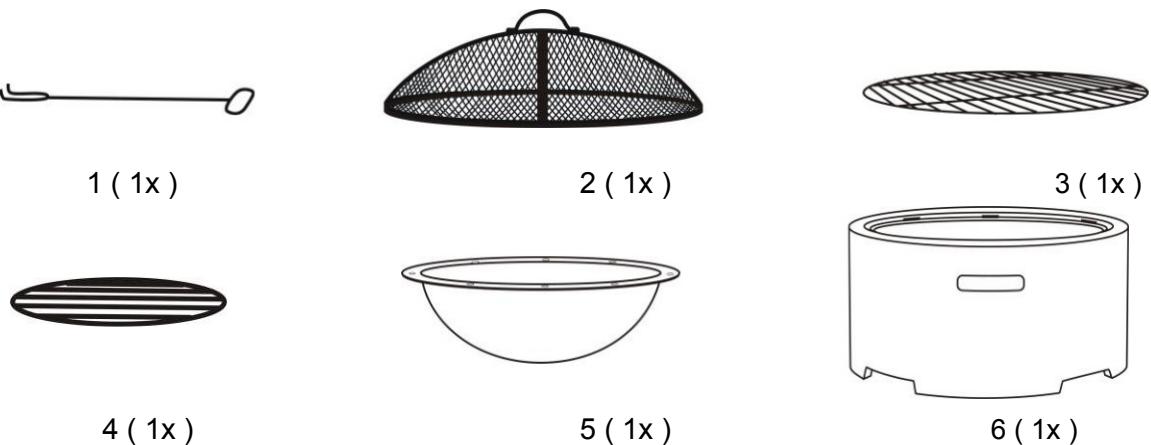

## ASSEMBLY

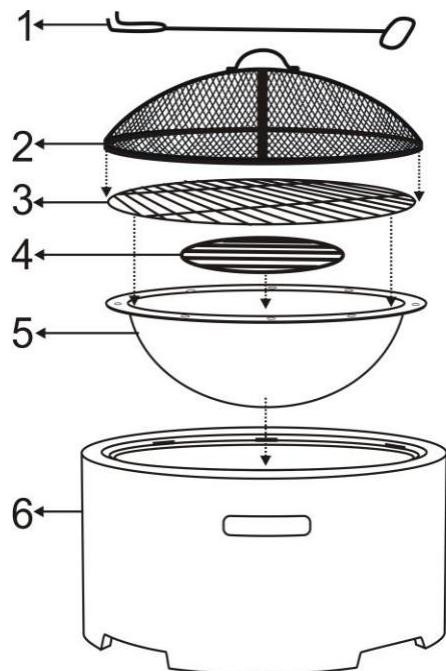

STEP 1- Place the MGO stand ( 6 ) on a permanent flat, level, heat resistant, non flammable surface away from flammable items.

STEP 2- Place the fire bowl ( 5 ) on the MGO stand ( 6 ).

STEP 3- Place the log grate ( 4 ) inside the fire bowl ( 5 ).

STEP 4- Place the grill ( 3 ) on the fire bowl ( 5 ).

STEP 5- Place the mesh cover ( 2 ) on the fire bowl ( 5 ).

**Your product is now ready to use and enjoy!**

**But please ensure you have read these instructions thoroughly before use.**

**Distributed by:**

*Lifestyle Appliances Limited*

*Unit 66 Enfield Industrial Estate, Redditch, Worcestershire, B97 6DE*

**Have a query? Contact us!**

**Tel:** 01527 65126 (Option 1) **Email:** [sales@lifestyleappliances.co.uk](mailto:sales@lifestyleappliances.co.uk)

**Web:** [www.lifestyleappliances.co.uk](http://www.lifestyleappliances.co.uk)