

Firepit with BBQ Rack

Care Instructions

- Do not use the grill over a naked flame. When flames are burning either remove the grill or use the swing arm to move it to the side. Only swing it over the heat when the embers are glowing and you are ready to cook on it. Using the grill over a naked flame could potentially cause the grill to warp.
- Always keep your fire pit covered or stored in a dry place indoors when not in use. Working parts and threads could seize up when exposed to heavy rain.
- Only remove the ash from the firepit once it has cooled down
- To remove the cold ash from the firepit, we recommend removing the drip pan from below the bowl and placing a fireproof container underneath the middle of the firepit. Then remove the ash grate from the bottom of the bowl and simply sweep the ash through the hole into the fireproof container. Replace the ash grate and drip pan afterwards.

Annual Maintenance

We recommend maintaining the firepit each year to ensure its longevity

Give it a good clean to remove any oil or dust, then spray it with a heat-resistant paint. This will add a protective layer as well as making it look like new again.