


Assembly Instructions

Toledo Cast Iron Chiminea



The Bijou Stove
COMPANY

Assembly Instructions for the Toledo Cast Iron Chiminea

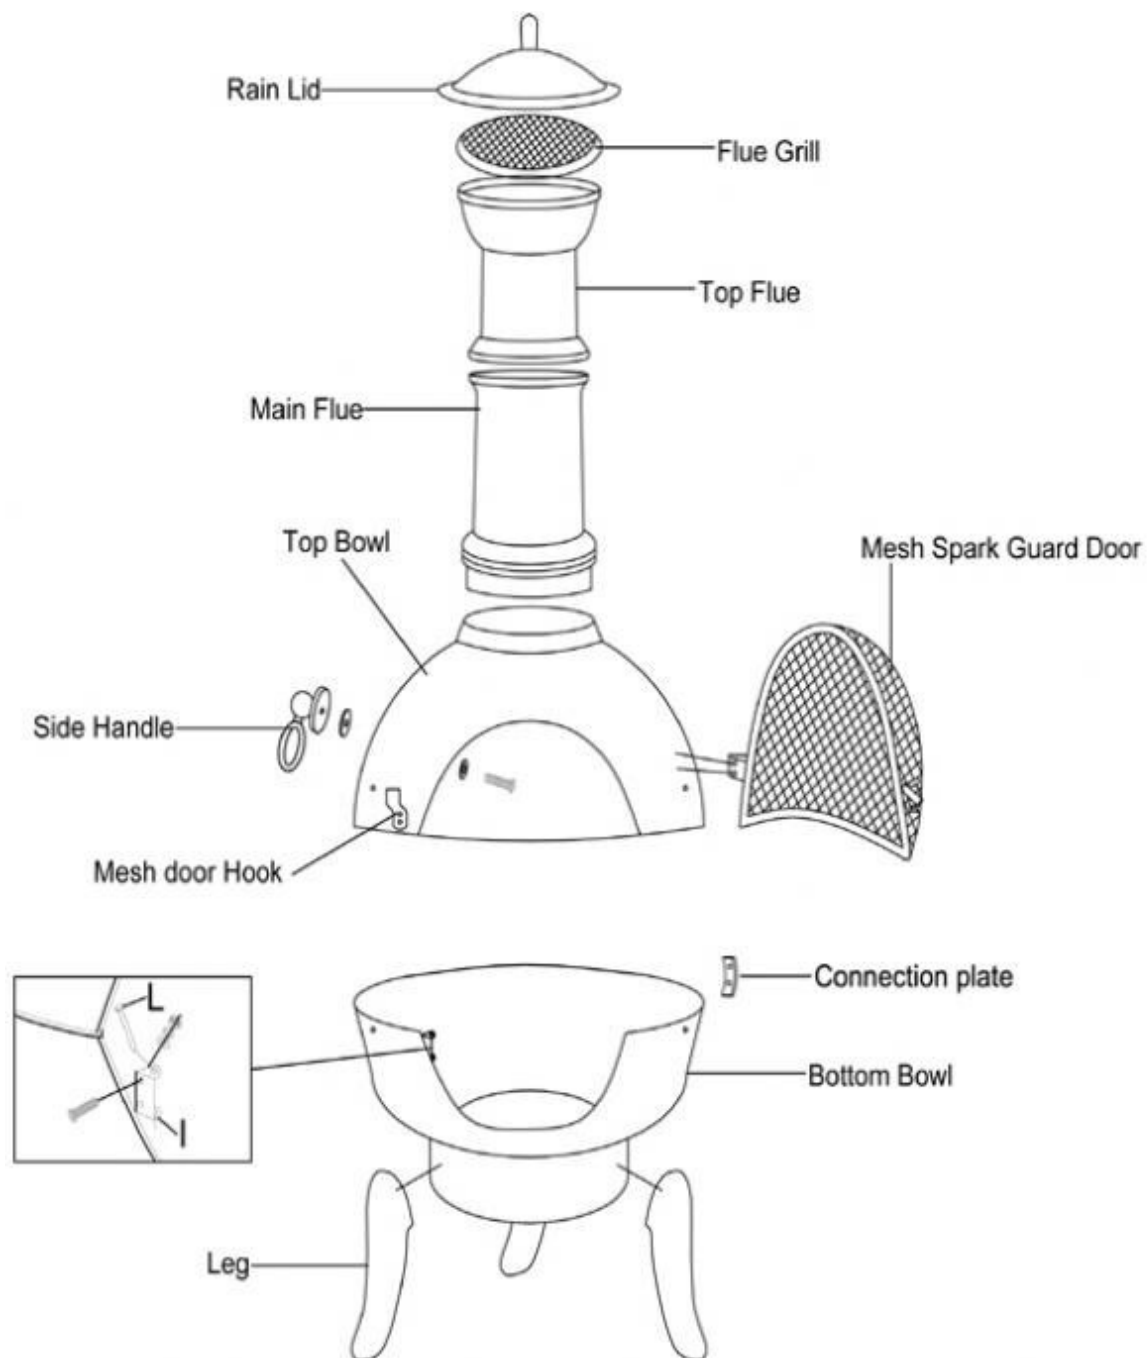

DO NOT FULLY TIGHTEN THE BOLTS BEFORE ASSEMBLING ALL THE PARTS.

It is highly recommended to have two people assist with the assembly process. While one person holds the various parts in place, the second individual can focus on inserting the necessary fixings. This teamwork makes the assembly much smoother and more efficient. The tools required for this task include a screwdriver and a socket wrench; a spanner and forked poker are also provided for your convenience. Before you begin assembling, please make sure to separate the bolts and nuts by size to facilitate the process.

The Bijou Stove Company

Assembly Instructions for the Toledo Cast Iron Chiminea

1. Start by assembling the Legs (G) to the Bottom Bowl (F2) using the six M6 X 25 Bolts (T2), along with the Washers (U1), Lock Washers (U2), and Nuts (V). It is important that you do not fully tighten the bolts at this stage. Next, attach the Legs (G) to the Leg Ring (K) using the three M6 X 30 Bolts (T1), along with additional Washers (U1), Lock Washers (U2), and Nuts (V) to ensure a secure connection.
2. Proceed to assemble the Top Bowl (F1) to the Bottom Bowl (F2) by utilizing the three Connection Plates (O) and six M6 X 20 Bolts (T3), again with the Washers (U1), Lock Washers (U2), and Nut (V). This step is crucial for creating a stable structure, and like before, do not tighten any of the bolts just yet to allow room for adjustments.
3. Next, attach the Main Flue (D) to the Top Bowl (F1) using three M6 X 30 Bolts (T1), along with the necessary Washers (U1), Lock Washers (U2), and Nuts (V). Ensure that all parts are aligned properly before securing them. This connection is essential for the proper function of the assembly, so take your time to ensure it is done correctly.
4. After that, assemble the Top Flue (C) to the Main Flue (D) using three M6 X 30 Bolts (T1), with the accompanying Washers (U1), Lock Washers (U2), and Nuts (V). This step integrates the flues, which are vital for ventilation and smoke management in your assembly. Again, do not tighten everything just yet, allowing for any necessary adjustments.
5. Next, attach the Hook (N) to the left side of the Bottom Bowl (F2) using the preassembled Bolts and Nuts. Following this, assemble the Airnt (H) to the right side of the Bottom Bowl (F2) using the same preassembled Bolts and Nuts. These components enhance the functionality of your assembly, providing additional features for cooking and handling.
6. Assemble the Handle (L) to the Top Bowl (F1) using the preassembled Washer, Lock Washer, and Nut. This handle will provide you with a convenient way to interact with the Top Bowl, making it easier to lift and maneuver as needed. Ensure that the handle is firmly attached for safe usage.

Assembly Instructions for the Toledo Cast Iron Chiminea

7. Attach the Hook (N) on the left side of the Top Bowl (F1) using the preassembled Bolts and Nuts. Then, assemble the Mesh Door (E) to the right side of the Top Bowl (F1) with the preassembled Bolts, Washers, Lock Washers, and Nuts. The mesh door serves as an essential component for maintaining the cooking environment inside the Top Bowl.

8. Assemble the BBQ Grill Hinge Bracket (M) to the inside left of the Bottom Bowl using the preassembled Bolts, Washers, Lock Washers, and Nuts. Be sure not to tighten the fixings at this point, as you may need to make adjustments later to ensure everything aligns correctly. This bracket is vital for the proper functioning of the grill.

9. Check that the Swing-out BBQ Grill (J) is level before proceeding. Once verified, tighten the Grill Hinge Bracket (M) fixings to secure the assembly. Then, place the Swing-out Grill (J) onto the Grill Bracket (M) and insert the Pin (P) to complete this connection. Ensuring that the grill is level will enhance the cooking experience.

10. Insert the Round Grate (I) into the Bottom Bowl (F2). This grate serves as a crucial surface for your grilling needs. It should fit securely to ensure stability during cooking.

11. Finally, place the Flue Grill (B) and Rain Lid (A) on top of the Flue (C). These components play an important role in managing heat and preventing rain from affecting your cooking. Once all parts are in place, double-check and tighten all fixings to complete the assembly process. Your assembly is now ready for use.

Assembly...

Transform your outdoor space with the Toledo Cast Iron Chiminea, a beautifully crafted centerpiece that promises warmth and ambiance. This comprehensive guide provides step-by-step assembly instructions, ensuring a smooth setup with essential tips and tools for a perfect fit. Gather a friend, follow the clear directions, and enjoy the art of outdoor cooking and relaxation around your new chiminea.



The Bijou Stove
COMPANY